

IF9319

ROW OWNER'S MANUAL

Table Of Contents

CAUTION!

Read all precautions and instructions in this manual before using this equipment.

| Important Safety Instructions | 3 |
|-----------------------------------------------|------|
| Instructions | 5 |
| Exploded View and Parts List | 6 |
| Measurement Guide | - 12 |
| Assembly Instructions | 13 |
| Assembly | 14 |
| Adjust Instructions and Exercise Instructions | - 25 |
| Maintenance Schedule | - 26 |
| General Maintenance Information | - 27 |
| Weight Training Tips | - 28 |

Please assemble according to the actual **Weights** you buy!

Important Safety Instructions

Before beginning any fitness program, you should obtain a complete physical examination from your physician. When using exercise equipment, basic precautions should always be taken, including the following:

- 1. Read all instructions before using the equipment.

 These instructions are written to ensure your safety and to protect the unit.
- 2. Use the equipment only for its intended purpose as described in this guide. Do not use accessory attachments that are not recommended by the manufacturer: such attachments might cause injuries.
- 3. The product should only be used on a level surface and is with 0.6 meters space around the product.

 Do not use the equipment outdoors.
- 4. Do not allow children on or near the equipment. And children are not allowed to use this equipment.

 Teenagers should use this equipment with adult supervision.
- 5. Do not overexert yourself or work to exhaustion. Do not attempt to lift more weight than you can control safely. If you feel any pain or abnormal symptoms, stop your workout immediately and consult your physician.
- 6. This equipment is not used as medical apparatus and instruments.
- 7. Never operate the unit when it has been dropped or damaged. Never drop or insert anything into any opening in the equipment. Always check the unit and its cables before each use. Make sure that all fasteners and cables are secure and in good working condition. Frayed or worn cables can be dangerous and may cause injury. Periodically check these cables for any indication of wear. Keep hands, limbs, loose clothing and long hair well out of the way of moving parts.
- 8. Be careful when getting on or off the equipment.
- 9. Wear proper exercise clothing and shoes for your workout, no loose clothing.


Important Safety Instructions

Personal Safety During Assembly

Read each step in the assembly instructions and follow the steps in sequence. Do not skip ahead. If you skip ahead, you may learn later that you have to disassemble components and that you may have damaged the equipment.

Assemble and operate the equipment on a solid, level surface. Locate the unit a few feet from walls or furniture to provide easy access. The equipment is designed for your enjoyment. By following these precautions and using common sense, you will have many safe and pleasurable hours of healthful exercise with the equipment.

Training Area and Free Area

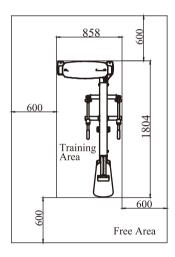

Specifications

Class: S


Maximum Wt. Capacity: 134kg/ 295lbs
Maximum User Weight: 150kg/ 330lbs
Product Dimension: 858*1804*1529mm
Product Total Surface: 858*1804mm
Product Total Mass: 91.5kg/ 202lbs

Instructions

Before beginning assembly please take the time to read instructions thoroughly. Please use the various lists in this manual to make sure that all parts have been included in your shipment. When ordering, use part number and description from the lists. Use only our replacement part when servicing. Failure to do so will void your warranty and could result in personal injury.

The equipment is designed to provide the smoothest, most effective exercise motion possible. After assembly, you should check all functions to ensure correct operation. If you experience problems, first recheck the assembly instructions to locate any possible errors made during assembly. If you are unable to correct the problem, call your authorized dealer. Be sure to have your serial number and this manual when calling. When all parts have been accounted for, continue on.


Tools Required

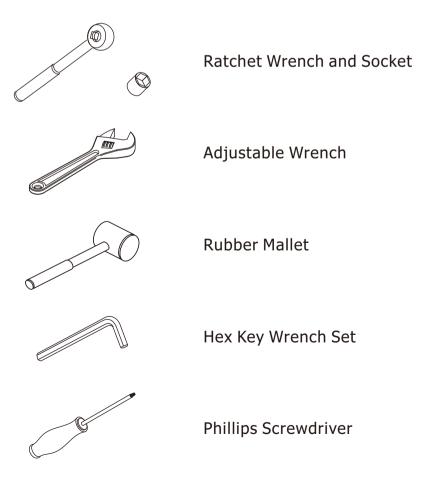


Overall

| ItemNo. | Grade No. | Part No. | Description | QTY |
|---------|-----------|-------------------|-------------------------------------|-----|
| 1 | 1 | IF930301ASSY | Weight Stack Frame ASSY | 1 |
| 2 | 2 | IT95014200 | Top Plate | 1 |
| 3 | 3 | IF930122ASSY | Bottom Bracket ASSY | 1 |
| 4 | 4 | IF93013100 | Training Placard Cover | 1 |
| 5 | 5 | IT95015500 | Top Rear Shroud | 1 |
| 6 | 6 | IF93012100 | Top Bracket | 2 |
| 7 | 7 | IF93013200 | Top Cover | 1 |
| 8 | 8 | IF93013300 | Right Plug | 1 |
| 9 | 9 | IF93013400 | Left Plug | 1 |
| 10 | 10 | IT95014400 | Guide Rod φ19*1242 | 2 |
| 11 | 11 | IF931902ASSY | Main Frame ASSY | 1 |
| 12 | 12 | IF931903ASSY | Boating Frame ASSY | 1 |
| 13 | 13 | IF930306ASSY | Handle Frame ASSY | 2 |
| 14 | 14 | IF931906ASSY | Pedal Frame ASSY | 1 |
| 15 | 15 | IF93190800 | Plate | 1 |
| 16 | 16 | IF93195600 | Cable ASSY | 1 |
| 17 | 17 | SG500110400V5 | 4.5" Pulley (Spacer) | 4 |
| 18 | 18 | IF93012600 | Axis | 1 |
| 19 | 19 | IT95016400 | Pulley Cap | 2 |
| 20 | 20 | IF93190700 | Chest Pad Support | 1 |
| 21 | 21 | IT90012000V1 | Selector Pin W/Coil | 1 |
| 22 | 22 | IT80023000 | Weight Rubber Bumper | 2 |
| 23 | 23 | IT95016100 | Guide Rod Fixing Sleeveφ30*φ19*45 | 2 |
| 24 | 24 | HFOPT900-04A0602 | Spring φ15.5*φ1.5*36 | 2 |
| 25 | 25 | FE97212000 | Circle Ring φ62.5*5 | 2 |
| 26 | 26 | FE97211900 | Cap φ60.1*16.1 | 2 |
| 27 | 27 | GB9310DS12 | Spring Washer φ10 | 2 |
| 28 | 28 | GB9510DS2 | Flat Washer φ11*φ20*2 | 32 |
| 29 | 29 | NM10DS2 | Nylon Lock Nut M10 | 12 |
| 30 | 30 | GB70M10*50DS20 | Socket Head Cap Screw M10*15 | 1 |
| 31 | 31 | GB70M10*25DS20NL | Socket Head Cap Screw M10*25 | 2 |
| 32 | 32 | GB70M16*40DS20 | Socket Head Cap Screw M16*40 | 1 |
| 33 | 33 | GB818M6*20*20N19 | Cross Recessed Pan Head Screw M6*20 | 18 |
| 34 | 34 | GB818M6*10N19 | Cross Recessed Pan Head Screw M6*10 | 4 |
| 35 | 35 | GB5780M10*70DS20 | Hex Head Bolt M10*70 | 4 |
| 36 | 36 | GB5780M10*50DS20 | Hex Head Bolt M10*50 | 2 |
| 37 | 37 | GB5780M10*75DS20 | Hex Head Bolt M10*75 | 2 |
| 38 | 38 | GB5780M10*80DS20 | Hex Head Bolt M10*80 | 2 |
| 39 | 39 | GB5780M10*30DS20 | Hex Head Bolt M10*30 | 4 |
| 40 | 40 | GB5780M10*120DS20 | Hex Head Bolt M10*120 | 2 |
| 41 | 41 | GB5780M10*100DS20 | Hex Head Bolt M10*100 | 2 |
| 42 | 42 | NBS12DHS | Hex Key S=12 | 1 |
| 43 | 43 | IT93192400V1 | Seat Pad | 1 |
| 44 | 44 | PL90161600V1 | Chest Pad | 1 |
| 45 | 45 | NBS8DHS | Hex Key S=8 | 1 |
| 46 | 46 | LW200BS | Wrench φ6*117 | 1 |
| 47 | 47 | YHY | Lube | 1 |
| 48 | 48 | IT95015600 | Rear Shroud | 1 |
| 49 | 99 | IF93062200 | Washer Φ62*Φ10.5*3 | 2 |
| 50 | 98 | IT81024103 | Spring Pin | 1 |

Overall

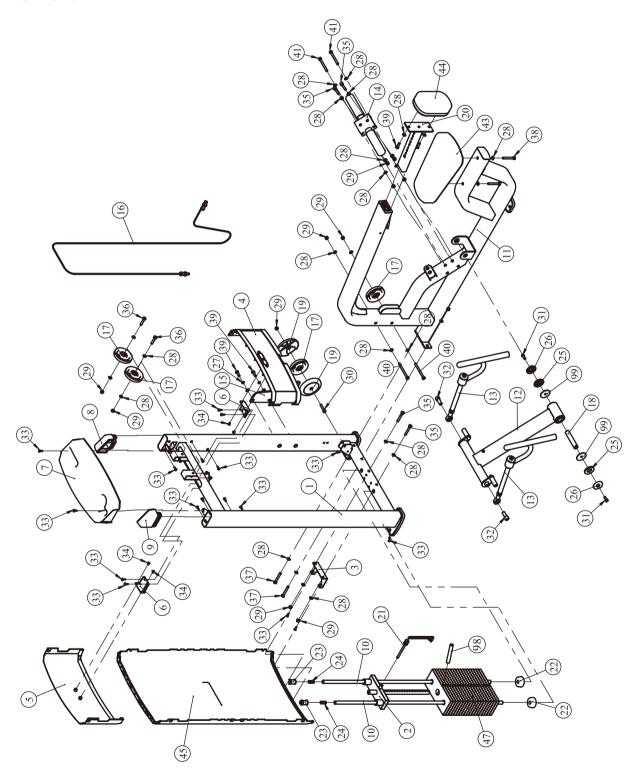


Weight Stack Frame ASSY

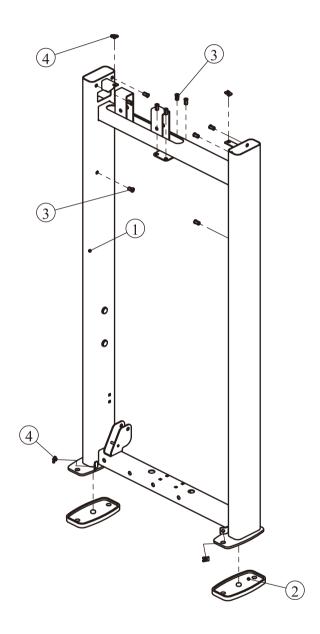

| ItemNo. | Grade No. | Part No. | Description | QTY |
|---------|-----------|----------------------|--------------------|-----|
| 1 | 1.1 | IF93030100 | Weight Stack Frame | 1 |
| 2 | 1.2 | BS81223100 | Foot Plate | 2 |
| 3 | 1.3 | GB17880.5M6*16.5DS17 | Rivet Nut M6 | 12 |
| 4 | 1.4 | AC32705800 | U-nut M6 | 4 |

Bottom Bracket ASSY


Main Frame ASSY

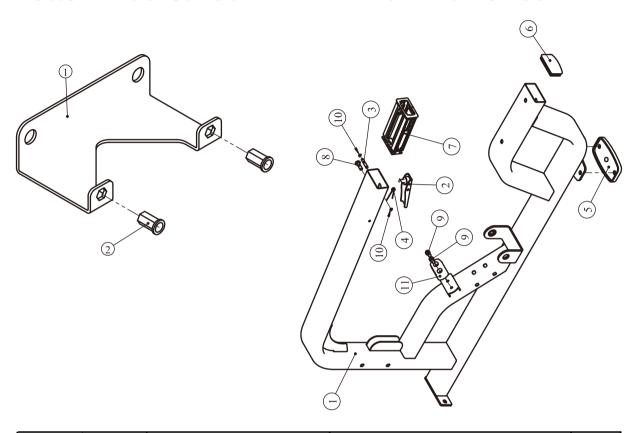

| ItemNo. | Grade No. | Part No. | Description | QTY |
|---------|-----------|----------------------|----------------|-----|
| 1 | 3.1 | IF93012200 | Bottom Bracket | 1 |
| 2 | 3.2 | GB17880.5M6*16.5DS17 | Rivet Nut M6 | 2 |

| ItemNo. | Grade No. | Part No. | Description | QTY |
|---------|-----------|-----------------------------------|-------------------------------|-----|
| 1 | 11.1 | IF93030200 | Main Frame | 1 |
| 2 | 11.2 | IT95014500 | Adjustable Support | 1 |
| 3 | 11.3 | CWRVL0012200 | Roll Pin | 1 |
| 4 | 11.4 | AXT3S5500 | Torsional Spring | 1 |
| 5 | 11.5 | BS81223100 | Foot Plate | |
| 6 | 11.6 | VLP8000 | Plug □50*100 | 1 |
| 7 | 11.7 | 11.7 IF93035000 Inner Wear Sleeve | | 2 |
| 8 | 11.8 | GB5780M10*30DS20 | Hex Head Bolt M10*30 | 1 |
| 9 | 11.9 | GB894.18FH12 | Socket Head Cap Screw M10*20 | 2 |
| 10 | 11.10 | GB894.18FH12 | .18FH12 Circlips For Shaft Φ8 | |
| 11 | | | Bumper | 1 |


Handle Frame ASSY

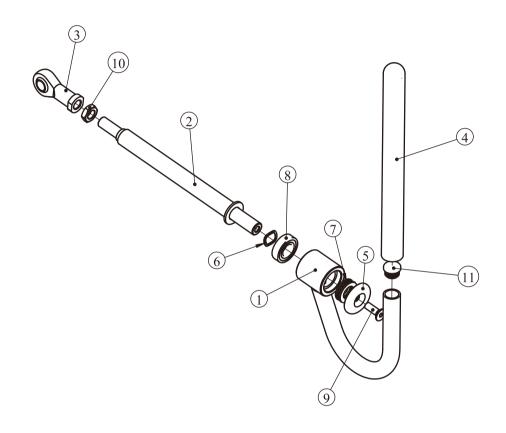

| ItemNo. | Grade No. | Part No. | Description | QTY |
|---------|-----------|------------------|-----------------------------------------------|-----|
| 1 | 13.1 | IF93190400 | Handle Frame | 1 |
| 2 | 13.2 | IF93190500 | Pull Rod Frame | 1 |
| 3 | 13.3 | SIBJK16S | Universal Joint | 1 |
| 4 | 13.4 | HF2011800 | Grip ST Φ24*Φ18*64 | 1 |
| 5 | 13.5 | IN-S51102100 | Shaft End Cover | 1 |
| 6 | 13.6 | BXDQ26*20*1.5 | Wave WasherΦ26*Φ20*1.5 | 1 |
| 7 | 13.7 | GB30151104 | Thrust Ball Bearing Φ21*Φ35*10 | 1 |
| 8 | 13.8 | GB2766004-2ZC3 | Deep Groove Ball Bearing Φ20*Φ42*12 | 1 |
| 9 | 13.9 | CNLM10*30*30DS20 | Hexagon Socket Countersunk Head Screws M10*30 | 1 |
| 10 | 13.10 | GB6172.1M16DS2 | Thin Nut M16 | 1 |
| 11 | 13.11 | BNH0002 | Plug Φ25.4 | 1 |

Boating Frame ASSY


Pedal Frame ASSY

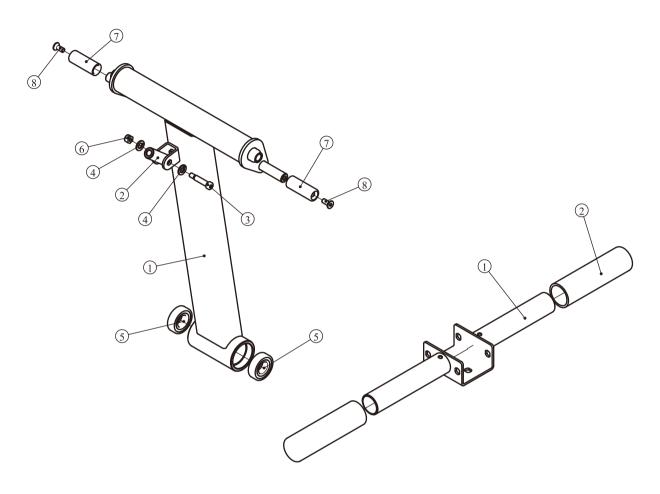

| ItemNo. | Grade No. Part No. Description | | QTY | |
|---------|--------------------------------|----------------|----------------------------------------------|---|
| 1 | 12.1 | IF93190300 | Arm Frame | 1 |
| 2 | 12.2 | IF930127ASSY | Steel Cable Adjustable ASSY | 1 |
| 3 | 12.3 | IF81105500V1 | Steel Cable Fixing Bolt | 1 |
| 4 | 12.4 | GB9510DS2 | Flat Washer Φ11*Φ20*2 | |
| 5 | 12.5 | GB2766205-2ZC3 | Deep Groove Ball Bearing Φ25*Φ52*15 | |
| 6 | 12.6 | NM8DS2 | Nylon Lock Nut M8 | 1 |
| 7 | 12.7 | PL4002900 | Protective Sleeve | 2 |
| 8 | 12.8 | CNLM8*20N19 | Hexagon Socket Countersunk Head Screws M8*20 | 2 |

| ItemNo. | Grade No. | Part No. | Description | QTY |
|---------|-----------|-------------|----------------------|-----|
| 1 | 14.1 | IF93190600 | Pedal Frame | 1 |
| 2 | 14.2 | FE970112000 | Pedal Sleeve Φ48*170 | 2 |

Measurement Guide

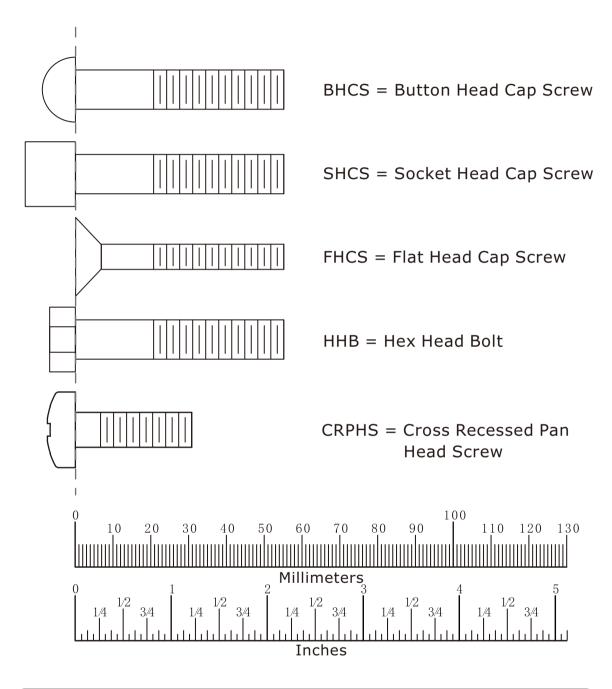

| Diameter of bolt (mm/inch) | M6(1/4") | M8(5/16") | M10(3/8") | M12(1/2") | M16(5/8") |
|-----------------------------------------|---------------------------|---------------------------------------------|--------------------------------|----------------------------------------------|-------------------|
| Tightening torque (N.m) | 9~12 | 22~30 | 45~59 | 78~104 | 193~257 |
| Operational methods for adult men | The strength of the wrist | The strength of the wrist and forearm | The strength of the entire arm | The strength of the arm and upper body | with all strength |

Assembly Instructions

Assembly of the equipment takes professional installers about 2 hours. If this is the first time you have assembled this type of equipment, plan to spend more time. It is strongly recommended to assemble the equipment by professional installers. You may find it quicker, safer, easier to assemble this equipment with the help of a friend, as some of components may be large, heavy or awkward to handle alone. It is important that you assemble your product in a clean, clear, uncluttered area. This will enable you to move around the product while you are fitting components and reduce the possibility of injury during assembly.

№ NOTE

As with any assembled part, proper alignment and adjustment is critical. While tightening the fasteners, be sure to leave room for adjustments. Do not fully tighten the fasteners until instructed to do so. Be careful to assemble the components in the sequence presented in this guide.

STEP 1


1. Attach the Main Frame ASSY (#11), the Plate (#15) and 4.5" Pulley (Spacer) (#17) to the Weight Stack Frame ASSY (#1) using:

two M10*30 HHB (#39) two M10*75 HHB (#37)

two M10*120 HHB (#40) three M10 Nylon Lock Nut (#29) nine Φ 11* Φ 20*2 Flat Washer (#28) two Φ 10 Spring Washer (#27)

2. Attach the Chest Pad Support (#20) to the Main Frame ASSY (#11).

Note: Wrench Tighten Bolts and Nylon Lock Nuts.

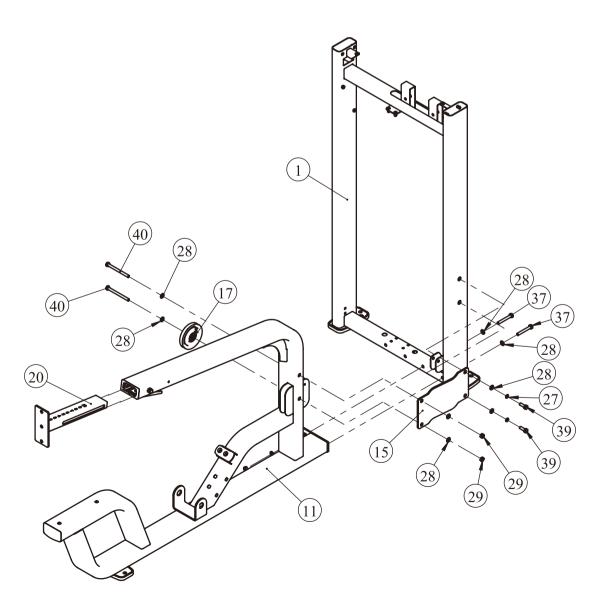

STEP 2

1. Attach the Pedal Frame ASSY (#14) to the Main Frame ASSY (#11) using:

two M10*70 HHB (#35) two M10*100 HHB (#41)

four M10 Nylon Lock Nut (#29) eight Φ11*Φ20*2 Flat Washer (#28)

2. Attach two Boating Frame ASSY (#12) to the Main Frame ASSY (#11) using:


two Φ60 Cap (#26) two Φ62.5*5 Circle Ring (#25)

one Axis (#18) one M10*25 SHCS (#31)

two Φ62*Φ10.5*3 Washer (#99)

3. Attach the Handle Frame ASSY (#13) and to the Boating Frame ASSY (#12) using : two M16*40 SHCS (#32)

Note: Wrench Tighten Bolts and Nylon Lock Nuts.

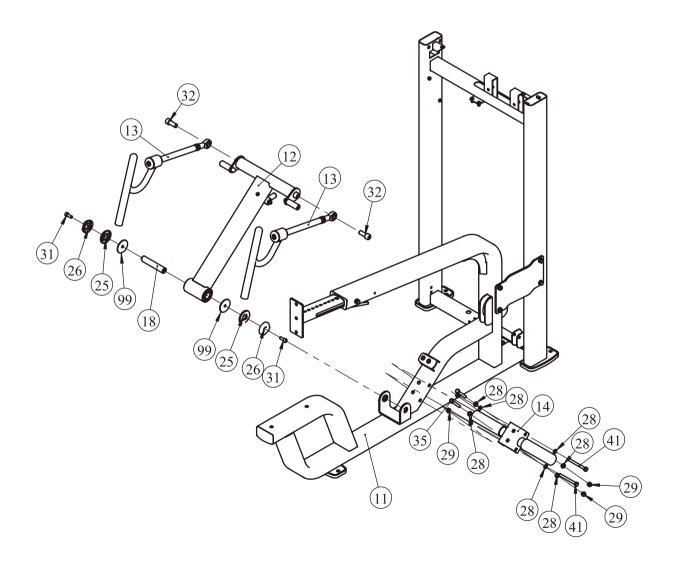

STEP 3

1. Attach one end of the Cable ASSY (#16) to the Boating Frame ASSY (#12) using: Before attach the 4.5" Pulley to the frame, you should lead the other end of the Cable ASSY (#20) across it.

2. Attach three 4.5" Pulley (Spacer) (#17) and two Pulley Cap (#19) to the Weight Stack Frame ASSY (#1) using:


one M10*50 SHCS (#30)

two M10*50 HHB (#36)

three M10 Nylon Lock Nut (#29)

four Φ11*Φ20*2 Flat Washer (#28)


Note: Wrench Tighten Bolts and Nylon Lock Nuts.

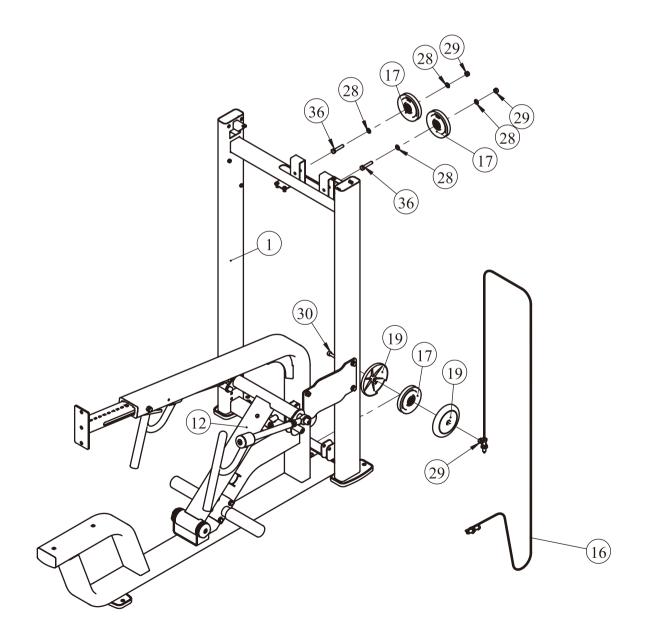

Select STEP

If you install the Front Shroud Attachment (IF93SH01) later, you should to finish the following step firstly.

- 1. Attach eight Plastic Nut to the Weight Stack Frame ASSY (#1).
- 2. Attach the Front Bracket ASSY, Right Bracket ASSY and the Left Bracket ASSY to the Weight Stack Frame ASSY (#1) using: eight ST4.2*16 Cross Disc Self Tapping Screw

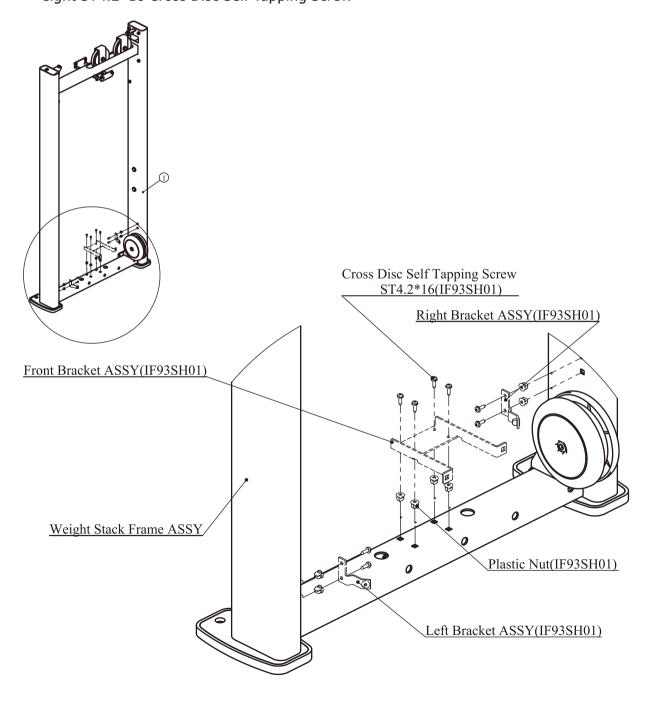

STEP 4

Here is the assembly instruction for 160LBS Weights!

1. Attach:

two Guide Rod Φ19*1242 (#10)

two Weight Rubber Bumper (#22)

fifteen Weight Plate 10LBS (#101)

two weight stack space (#103)

one Top Plate (#2)


to the Weight Stack Frame ASSY (#1) using:

two Guide Rod Fixing Sleeve Φ25*Φ19*45 (#27)

two Spring (#28)

2. Attach the First Weight Plate 10LBS (#101) to the Top Plate (#2) using: one Spring Pin Φ 11*76 (#98)

- 3. Attach the Selector Pin W/Coil (#21) to the Top Plate (#2).
- 4. Attach the Cable ASSY (#16) to the Top Plate (#2).

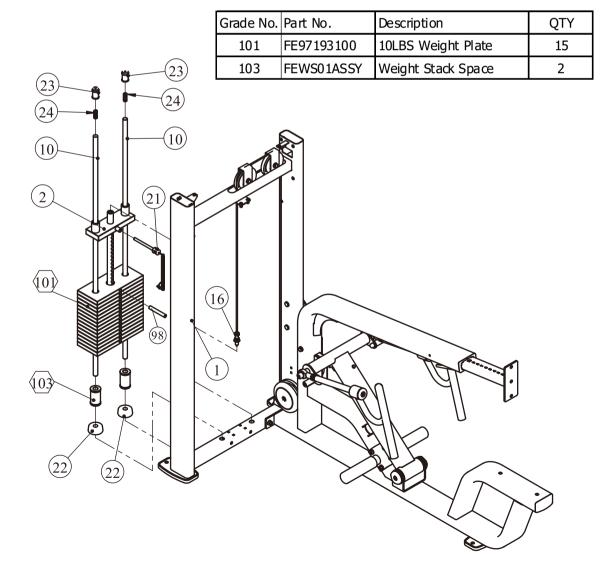

STEP 4


Here is the assembly instruction for 200LBS Weights!

1. Attach:

two Guide Rod Φ 19*1242 (#10) two Weight Rubber Bumper (#22) nineteen Weight Plate 10LBS (#101) one Top Plate (#2) to the Weight Stack Frame ASSY (#1) using: two Guide Rod Fixing Sleeve Φ 25* Φ 19*45 (#27) two Spring (#28)

- 2. Attach the First Weight Plate 10LBS (#101) to the Top Plate (#2) using: one Spring Pin Φ 11*76 (#98)
- 3. Attach the Selector Pin W/Coil (#21) to the Top Plate (#2).
- 4. Attach the Cable ASSY (#16) to the Top Plate (#2).

| Grade No. | Part No. | Description | QTY |
|-----------|------------|--------------------|-----|
| 101 | FE97193100 | 10LBS Weight Plate | 19 |

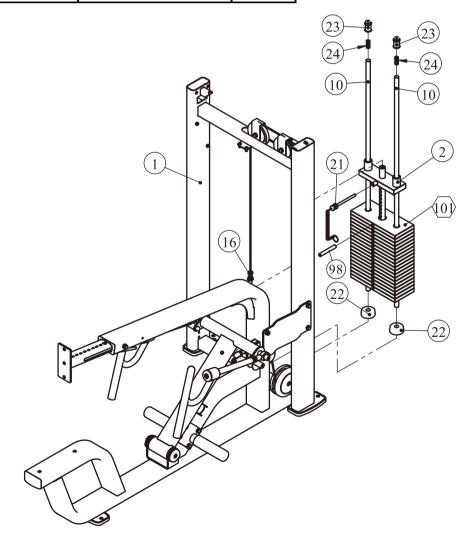

STEP 4

Here is the assembly instruction for 235LBS Weights!

1. Attach:

two Guide Rod Φ19*1242 (#10) fifteen Weight Plate 15LBS (#102) two Weight Rubber Bumper (#22) two weight stack space (#103)

one Top Plate (#2)

to the Weight Stack Frame ASSY (#1) using:

two Guide Rod Fixing Sleeve Φ25*Φ19*45 (#27)

two Spring (#28)

- 2. Attach the First Weight Plate 15LBS (#102) to the Top Plate (#2) using: one Spring Pin Φ 11*76 (#98)
- 3. Attach the Selector Pin W/Coil (#21) to the Top Plate (#2).
- 4. Attach the Cable ASSY (#16) to the Top Plate (#2).

| Grade No. | Part No. | Description | QTY | |
|-----------|------------|--------------------|-----|----------------|
| 102 | FE97193200 | 15LBS Weight Plate | 15 | |
| 103 | FEWS01ASSY | Weight Stack Space | 2 | 23)——\$ |
| | | | | 24 10 10 |

STEP 4


Here is the assembly instruction for 295LBS Weights!

1. Attach:

two Guide Rod Φ 19*1242 (#10) two Weight Rubber Bumper (#22) nineteen Weight Plate 15LBS (#102) one Top Plate (#2) to the Weight Stack Frame ASSY (#1) using: two Guide Rod Fixing Sleeve Φ 25* Φ 19*45 (#27) two Spring (#28)


- 2. Attach the First Weight Plate 15LBS (#102) to the Top Plate (#2) using: one Spring Pin Φ 11*76 (#98)
- 3. Attach the Selector Pin W/Coil (#21) to the Top Plate (#2).
- 4. Attach the Cable ASSY (#16) to the Top Plate (#2).


| Grade No. | Part No. | Description | QTY |
|-----------|------------|--------------------|-----|
| 102 | FE97193200 | 15LBS Weight Plate | 19 |

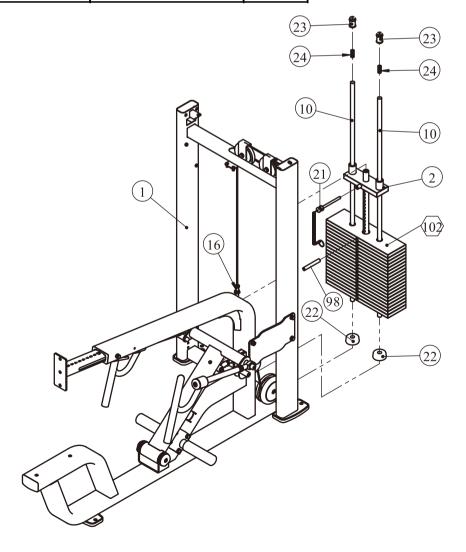


All weight plate sticker paste schematic diagram




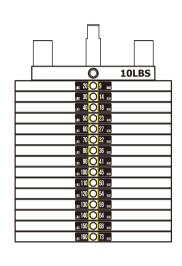

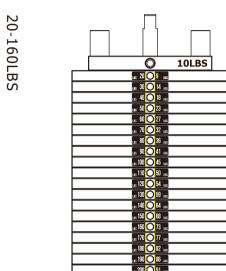

_{LBS} 25 11 ms _{LBS} 40 18 KGS LBS 55 25 KES 32 KES LBS 70 LBS 85 45 KGS LBS 100 52 KGS LBS 115 _{LBS} 130 59 KGS LBS 145 66 KGS LBS 160 72 Kes LBS 175 79 KGS _{LBS} 190 86 KES LBS 205 93 KGS LBS 220 100 _{kes} LBS 235 107_{KGS} LBS 250 113_{kss} LBS 265 120 KGS LBS 280 127 KGS LBS 295 134 KGS LBS 310 141 KES LBS 325 147 KGS

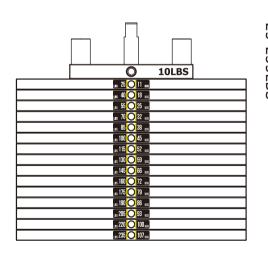


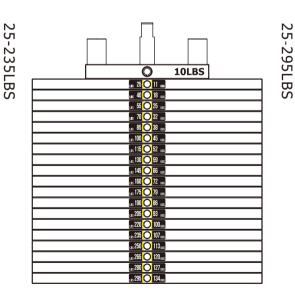

20-200LBS

STEP 5

- 1. Attach the Bottom Bracket ASSY (#3) to the Weight Stack Frame ASSY (#1) using: two M10*70 HHB (#35) four Φ11*Φ20*2 Flat Washer (#28) two M10 Nylon Lock Nut (#29)
- 2. Attach two Top Bracket (#6) to the Training Placard Cover (#4) and the Top Rear Shroud (#5) using: four M6*10 CRPHS (#34)
- 3. Attach the Rear Shroud (#44) to the Weight Stack Frame ASSY (#1) and the Bottom Bracket ASSY (#3) using: six M6*20 CRPHS (#33)
- 4. Attach the Training Placard Cover (#4) and the Top Rear Shroud (#5) to the Weight Stack Frame ASSY (#1) using: ten M6*20 CRPHS (#33)
- 5. Attach the Right Plug (#8) and the Left Plug (#9) to the Weight Stack Frame ASSY (#1).
- 6. Attach the Top Cover (#7) to the Weight Stack Frame ASSY (#1) using: two M6*20 CRPHS (#33)

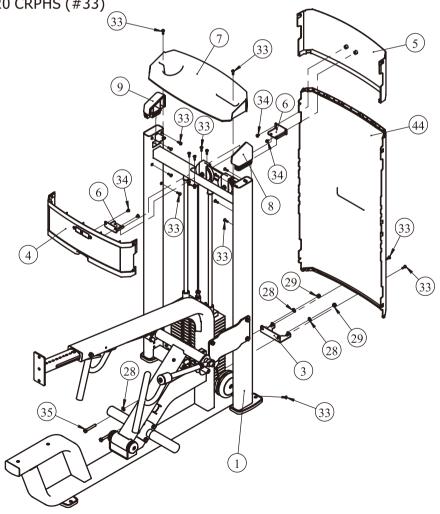


STEP 6

Attach the Seat Pad (#42) and the Chest Pad (#43) to the Chest Pad Support (#20) and the Main Frame ASSY (#11) using:

two M10*30 HHB (#39)

two M10*80 HHB (#38)

four Φ11*Φ20*2 Flat Washer (#28)

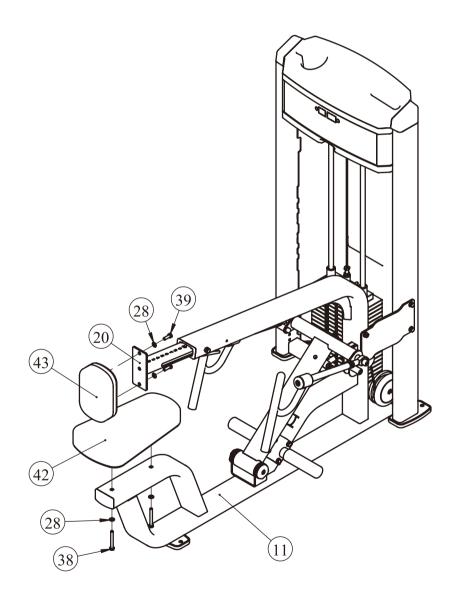


Adjust Instructions and Exercise Instructions

The Chest Pad adjustment

- 1. Pull the Adjustable Handle and adjust the Chest Pad to the desired position.
- 2. Make sure the pin gets into the hole completely.

The use of Selector Pin W/Coil

- 1. Select an appropriate weight and put the Selector Pin W/Coil into the hole on it.
- 2. Make sure the Selector Pin W/Coil gets into the hole completely.

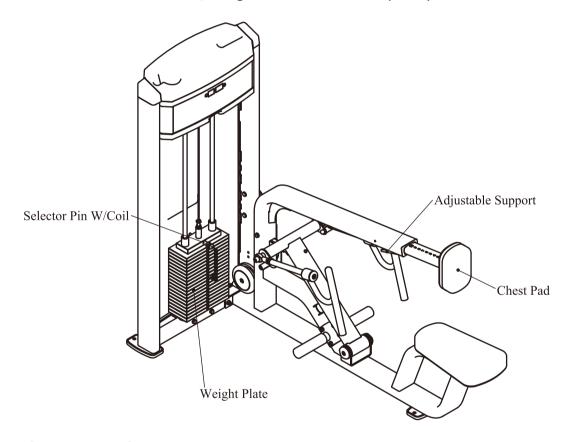

Exercise Instructions



Maintenance Schedule

| ROUTINE | COMMERCIAL MAINTENANCE | HOME MAINTENANCE | LATEST DATE ENTRY | | | | | |
|--------------------------------------------------------------------------------------|---------------------------|---------------------|-------------------|--|--|--|--|--|
| Inspect; Links, Pull Pins, Snap Locks, Swivels, Weight Stack Pins | DAILY | WEEKLY | | | | | | |
| Clean; Upholstery | DAILY | WEEKLY | | | | | | |
| Inspect; Cables or Belts and their tension | DAILY | WEEKLY | | | | | | |
| Inspect; Accessory Bars, and Handles | WEEKLY | 3 MONTHS | | | | | | |
| Inspect; All Decals | WEEKLY | 3 MONTHS | | | | | | |
| Inspect; All Nuts and Bolts, Tighten if needed | WEEKLY | 3 MONTHS | | | | | | |
| Inspect; Anti-Skid Surface | WEEKLY | 3 MONTHS | | | | | | |
| Clean & Lubricate; Guide Rods with a Teflon (PTFE) based lubricant (Superlube) | MONTHLY | 3 MONTHS | | | | | | |
| Lubricate; Seat Sleeves, Turcite Bushings, Linear Bearing | MONTHLY | 3 MONTHS | | | | | | |
| Clean and Wax; All Glossy Finishes | 6 MONTHS | YEARLY | | | | | | |
| Repack with Grease; Linear Bearings | 6 MONTHS | YEARLY | | | | | | |
| Replace; Cables, Belts and Connecting Parts | YEARLY | 3 YEARS | | | | | | |

Your equipment comes with a commercial maintenance decal. For personal, in home use, please follow the home maintenance schedule listed above.

General Maintenance Information

Links, Pull-Pins, Snap Hooks, Swivels, Weight Stack Pins:

- * Check all pieces for signs of visible wear or damage.
- * Check springs in snap hooks and pull-pins for proper tension and alignment.
- * If the spring sticks or has lost its rigidity, replace it immediately.

Upholstery:

- * To ensure prolonged upholstery life and proper hygiene, all upholstered pads should be wiped down with a damp cloth after every workout.
- * Periodically take the time to use a mild soap or an approved vinyl upholstery cleaner to deter the onset of cracking or drying. Avoid using any abrasive cleaners or cleaners not intended for use on vinyl.
- * Replace ripped or warn upholstery immediately.
- * Keep sharp or pointed objects clear of all upholstery.

Decals:

* Inspect and familiarize yourself with any safety warnings or other user information posted on each decal.

Nuts and Bolts:

- * Inspect all nuts and bolts for any loosening and tighten if needed.
- * Go through a re-tightening sequence periodically to ensure that all hardware is tensioned proper.

Anti-Skid Surfaces:

* These surfaces are designed to supply secure footing and need to be replaced if they appear worn or become slippery.

Belts and Cables:

- * We uses only high quality belt, and mil-spec cables.
- * Visually inspect the belts and cables for fraying, cracking, peeling or discoloration.
- * While the machine is not in use, carefully run your fingers along the belt or cable to feel for thinning or bulging areas.
- * Replace belts and cables immediately at the first signs of damage or wear. Do not use equipment until belts or cables have been replaced.

Belt and Cable Tension:

- * Referring to the Owners Manual, when belts or cables are used check all bolts attachments to be sure they are properly attached.
- * Check slack in cables and re-adjust cable tension if needed.

Seat Sleeves, Guide Rods:

- * Wipe down adjusting tubes with a dust free rag before applying lubricant.
- * Lubricate seat sleeves and Guide Rods with a Silicon or Teflon based lubricant spray.

Linear Bearings:

* Referring to the Owners Manual carefully disassemble the bearing from its housing and place a finger full of light grease (lithium, super lube, etc.) into the inside of the bearing. Using your finger, press the grease into the ball-bearings and their tracks. repeat until the ball-bearing tracks are full of grease. Insert the shaft back into the bearing and wipe off excess grease.

PLEASE KEEP THIS FOR YOUR RECORDS

Weight Training Tips

Use this manual to guide you through the basic exercises you can perform on your equipment. To gain maximum results and avoid possible injury, consult a fitness professional to develop your complete exercise program.

Always consult your physician before starting any exercise program.

To be successful in your exercise program, it is important to develop an understanding of the basic principles of strength training. Now that you have your equipment, it is only natural that you want to get started immediately. First, determine a set of realistic goals and objectives for yourself. By deciding on an exercise plan that is right for you prior to starting, you will contribute significantly to your success.

Warm up properly before engaging in weight resistance training. Stretching, yoga, jogging, calisthenics or other cardiovascular exercise can help prepare your body for the heavier workload of lifting weights.

Learn how to perform the exercise correctly before using heavy weight. Correct form is important to avoid injury and to ensure that you work the proper muscle groups.

Know your limitations. If you are new to weight training or are embarking on an exercise regimen after a long layoff, start slowly and build foundational strength over a longer period of time.

Pay attention to your breathing. Exhale when you exert is a general rule of thumb. Never hold your breath.







